



WALLS & FLOORS

walls & floors

► WEDI WATERPROOF BUILDING BOARD



Wedi Building Board combines lightness, structural stability, thermal insulation and moisture impermeability. Its surface provides an ideal substrate for thin-bed tile laying on walls and floors or the application of render finishes. There are so many ways to use Wedi Building Board, the only limit is your imagination!

BUILDING BOARD - FOR WALLS & FLOORS

1250 x 600 x 4mm	BA4	£26
1250 x 600 x 6mm	BA6	£24
2500 x 600 x 10mm	BA10	£53
2500 x 600 x 20mm	BA20	£56
2500 x 600 x 30mm	BA30	£67
2500 x 600 x 40mm	BA40	£74
2500 x 600 x 50mm	BA50	£81
2500 x 625 x 12.5mm	BA12.5	£56
2500 x 900 x 12.5mm	BA12.5 (900)	£93
2500 x 900 x 20mm	BA20 (900)	£104
2500 x 900 x 30mm	BA30 (900)	£124
2500 x 900 x 50mm	BA50 (900)	£166
2500 x 1200 x 30mm	BA30 (1200)	£151
2500 x 1200 x 50mm	BA50 (1200)	£212
2600 x 1200 x 12.5mm	BA12.5 (1200)	£148

CORNER UNITS/PIPE BOXING - PREFABRICATED 90° ANGLE

2500 x 20mm (150 x 150mm sides)	R15	£50
2500 x 20mm (200 x 200mm sides)	R20	£72
2500 x 20mm (200 x 400mm sides)	R40	£92
2500 x 20mm (300 x 300mm sides)	R30	£92

BA CONSTRUCT - PRE-CUT FOR CREATING CURVES

2500 x 600 x 30mm length pre-cut	BALW30	£104
2500 x 600 x 30mm width pre-cut	BAWW30	£104

BATH PANELS - COMPLETE WITH INSTALLATION KIT

1800 x 600 x 30mm side panel	4971	£85
2100 x 600 x 30mm side panel	4974	£117
760 x 600 x 30mm end panel	4972	£43

FUNDO SHOWER SURROUND KITS - HORIZONTAL OUTLET WASTE

Pentagon	073756	£1181
Round	073763	£2252
Spiral (handed entrance)	073750	£4060

FUNDO SHOWER BASES - CENTRE DRAIN HORIZONTAL OUTLET WASTE

900 x 750mm	073735/176	£362
900 x 900mm	073735/170	£383
1000 x 1000mm	073735/131	£407
1200 x 900mm	073735/174	£424
1200 x 1200mm	073735/171	£420
1400 x 900mm	073735/196	£425
1400 x 1000mm	073735/198	£428
1500 x 900mm	073736/120	£426
1500 x 1000mm	073736/121	£435
1500 x 1500mm	073735/175	£486
1800 x 900mm	073735/580	£476

ACCESSORIES

Plastic dowels 80mm (x100)	PD80	£59
Plastic dowels 100mm (x100)	PD100	£70
Metal dowels 80mm (x100)	MD80	£62
Metal dowels 100mm (x100)	MD100	£75
Metal dowels 140mm (x100)	MD140	£87
Galvanised metal washers (x100)	PW60	£24
Joint reinforcement tape 125mm	TT25	£17
Waterproof sealing tape 10m	WT10	£66



Building board & bath panel installation



Fundo Spiral shower surround

CONSTRUCTING A WETROOM


There are several different ways of constructing a wetroom, there are however some basic principles that must be observed - these are:
 The floor may be screened, constructed from heavy duty wooden sheets such as plywood, or created using a pre-formed shower floor. In both these cases there must be a gradual slope to fall towards an appropriate shower waste outlet. The structure must be solid, without flexing & any joints in the construction material must be firm & well fitting. The body of the shower waste outlet must be recessed or cast into the floor in such a way that the top of the flange is on a level, or fractionally lower than the floor surrounding it. There can be no upwards step into the shower waste outlet. Roman Shield can not be used directly over conventional narrow wooden floorboards, such boards must be replaced or covered with a sheet material such as plywood. For more information & to view a short video guide, or to download the Roman Shield technical installation manual please visit www.roman-showers.com

ROMAN SHIELD - PRE-FORMED SHOWER FLOOR

1000 x 1000mm pre-formed shower floor	RSHSF10	£399
1350 x 850mm pre-formed shower floor	RSHSF138	£399
Shower floor waste - for Tiles	RSHSFWT	£125
Shower floor waste - for Vinyl	RSHSFVW	£95



ROMAN SHIELD
Pre-formed Shower Floor

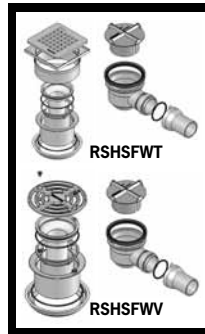

Roman Shield Pre-formed shower floor:

- Designed with 22mm thick edge work to be compatible with WBP board.
- Can be trimmed by 50mm around the edges to miss joists if necessary.
- Self-supporting - installation directly to joists with no additional support.
- Easy to install.
- Nonporous.
- Off-centre waste to avoid joists.
- 17mm of fall to waste.
- Suitable for installation to: timber floors, floating floors & concrete floors.
- Available with a choice of 2 waste assemblies:
 - Tile** - supplied with a fast flow waste & stainless steel cover. Adjustable height to be compatible with a wide range of tiles.
 - Vinyl** - supplied with fast flow waste & pressed stainless steel cover which is screw fixed to the waste body. Adjustable height to be compatible with 2-4mm vinyl flooring.
- 10 year true-life guarantee
- Manufactured from Roman Stone, solid surface technology.

ROMAN SHIELD - WETROOM SYSTEM

Roman Shield tanking kit	RSH01	£272
Wetroom waste (not for use with Roman Shield Pre-formed shower floor)	ALFW	£93
OPTIONAL EXTRAS:		
Internal corners (each)	RSH02	£11
Internal corners (x20)	RSH03	£196
External corners (each)	RSH04	£11
External corners (x10)	RSH05	£93
Pipe sleeves (each)	RSH06	£8
Pipe sleeves (x10)	RSH07	£69
Shower waste outlet sleeve	RSH08	£20
Tanking tape 100mm x 15metres	RSH09	£123
Tanking primer 2kg	RSH10	£30
Tanking compound 9kg	RSH11	£114

ROMAN SHIELD
Wetroom System


Roman Shield tanking kit includes:

- (Covers approx. 10m²)
- 2kg of primer
 - 15m of tanking tape
 - 1 x self adhesive shower waste outlet sleeve
 - 9kg tanking compound
 - Installation instructions & guarantee card.

ALFW
Roman Shield wetroom waste



ROMAN SHIELD - STEP BY STEP INSTALLATION GUIDE (TO VIEW A VIDEO GUIDE, OR TO DOWNLOAD THE INSTALLATION MANUAL PLEASE VISIT www.roman-showers.com)

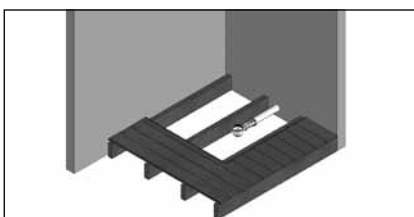

1. Supporting the pre-formed shower floor

The pre-formed shower floor can be installed direct to joists without additional support, or to a concrete floor



2. Installing the pre-formed shower floor

The pre-formed shower floor is screw fixed to the joists. WBP/Plywood can then be used to complete the level shower room.



3. Preparation

Ensure all surfaces in the construction area are dry, solid, supportive & level, as well as free from oil, grease, dust & other separating layers.



4. Applying the primer

The entire floor area should be primed with a turn up of 100mm onto the walls. The walls of the showering area should also be primed.



5. Apply the shower outlet sleeve

Apply the shower outlet sleeve ensuring it is flat with no creases. The centre of the sleeve is then removed & the waste clamping ring is fixed.



6. Apply the Roman Shield tape, pipe sleeves & corners

The tape, pipe sleeves & corners are bedded down using tanking compound. All wall to wall & wall to floor junctions must be reinforced with tanking tape.



7. Pre-checks

Ensure the tape, pipe sleeves & corners have been fitted to the appropriate areas & wait until the tanking compound is dry (curing time is 2-4 hours).



8. Apply the tanking compound

The entire floor area should be tanked with a turn up of 100mm onto the walls. The walls of the showering area should also be tanked.



9. Installation complete

You are now ready to start tiling & grouting or fitting vinyl flooring as normal.

CARDESIO - SAND



Tile	30 x 30cm	2121CA50	box (11)	£55
	30 x 60cm	2122CA50	box (6)	£74
	45 x 45cm	2123CA50	box (5)	£65



Border	10 x 45cm	2155CA5B	each	£19
--------	-----------	-----------------	------	-----

CASITA - BEIGE



Tile	25 x 35cm	1154CJ80	box (12)	£29
------	-----------	-----------------	----------	-----



Border	3 x 25cm	2948CJ62	each	£16
--------	----------	-----------------	------	-----

CASITA - GREY



Tile	25 x 35cm	1154CJ70	box (12)	£29
------	-----------	-----------------	----------	-----



Border	3 x 25cm	2948CJ72	each	£16
--------	----------	-----------------	------	-----

CASITA - WHITE CREME



Tile	25 x 35cm	1154CJ60	box (12)	£29
------	-----------	-----------------	----------	-----



Border	3 x 25cm	2948CJ62	each	£16
--------	----------	-----------------	------	-----

MONTEVALLO - BEIGE




Tile	34 x 34cm	2163FM41	box (12)	£57
	46 x 46cm	2164FM41	box(6)	£56

MONTEVALLO - CREME




Tile	34 x 34cm	2163FM51	box (12)	£57
	46 x 46cm	2164FM51	box(6)	£56

MONTEVALLO DECOR - BEIGE

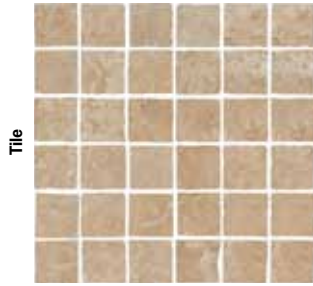

Tile	34 x 34cm - 2.5 x 2.5cm mosaic:	2560FM41	box (9)	£241
	34 x 34cm - 5.5 x 5.5cm mosaic:	2559FM41	box (9)	£150

MONTEVALLO DECOR - CREME

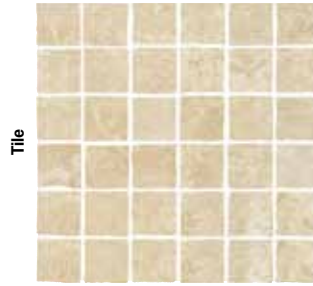

Tile	34 x 34cm - 2.5 x 2.5cm mosaic:	2560FM51	box (9)	£241
	34 x 34cm - 5.5 x 5.5cm mosaic:	2559FM51	box (9)	£150

SALAMANCA - BEIGE



Tile	33 x 33cm	3114FC72	box (9)	£21
	40 x 40cm	3137FC72	box (6)	£23

SALAMANCA - LIMESTONE



Tile	33 x 33cm	3114FC71	box (9)	£21
	40 x 40cm	3137FC71	box (6)	£23

SCOPE - ANTHRACITE



Tile	7.5 x 60cm	2410BE03	box (20)	£117
	15 x 60cm	2409BE03	box (10)	£103
	30 x 60cm	2710BE03	box (6)	£55
	45 x 45cm	2711BE03	box (5)	£52
	60 x 60cm	2712BE03	box (3)	£68



Border	10 x 45cm	2715BE13	each	£30
--------	-----------	-----------------	------	-----

SCOPE - BEIGE



Tile	7.5 x 60cm	2410BE04	box (20)	£117
	15 x 60cm	2409BE04	box (10)	£103
	30 x 60cm	2710BE04	box (6)	£55
	45 x 45cm	2711BE04	box (5)	£53
	60 x 60cm	2712BE04	box (3)	£68



Border	10 x 45cm	2715BE14	each	£30
--------	-----------	-----------------	------	-----

SCOPE - BROWN



Tile	7.5 x 60cm	2410BE02	box (20)	£117
	15 x 60cm	2409BE02	box (10)	£103
	30 x 60cm	2710BE02	box (6)	£55
	45 x 45cm	2711BE02	box (5)	£52
	60 x 60cm	2712BE02	box (3)	£68



Border	10 x 45cm	2715BE12	each	£30
--------	-----------	-----------------	------	-----

SCOPE - GREY



Tile	7.5 x 60cm	2410BE01	box (20)	£117
	15 x 60cm	2409BE01	box (10)	£103
	30 x 60cm	2710BE01	box (6)	£55
	45 x 45cm	2711BE01	box (5)	£52
	60 x 60cm	2712BE01	box (3)	£68



Border	10 x 45cm	2715BE11	each	£30
--------	-----------	-----------------	------	-----



Scope Anthracite & Grey